



A & F WOOD PRODUCTS, INC.

5665 Sterling Drive Howell, MI 48843

Phone: 517.545.5811 Fax: 517.545.5633 Toll Free: 800.367.3293


www.afwood.com

Bypass 60 lbs. Installation Instructions



- **For Steel Track - 1 3/8" doors**, install 8902 or 8906 hangers on both front and rear doors.
For 1" - 1 1/8" doors, install 8902 or 8906 hangers on front doors, 8901 or 8905 on rear doors.
- **Aluminum Track (non-fascia) - For 1 3/8" doors**, install 8901/8905 hangers on front door, 8902/8906 on rear door.
 For 1 3/4" doors, reverse above hanger positions on doors: **For 1" - 1 1/8" doors**, install 8902/8906 hangers on both front and rear doors.
- **Alum. Fascia Track - For 1 3/8" doors**, install 8902/8906 hangers on both front and rear doors.
For 1" - 1 1/8" doors, install 8902/8906 on front door, 8901/8905 on rear door.

Note: Make opening width a min. of 1" (25mm) less than set size indicated, to provide door overlap at center. Ex: For set No. 8848 make opening a maximum of 47" (1.19m).

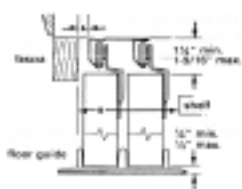


With non-fascia track, track must clear fascia by (A) and shelves or drawers by a minimum of (B). Fascia track mounts flush with front edge of head jamb.

Door Size	3/4"	1" - 1 1/8"	1 3/8"
Steel track A	N/A	3/8"	5/8"
Alum track A	0"	3/8"	7/8"
Shelf B	2 3/4"	3 1/2"	4"

Step 1 - Screw track to head jamb with track centered between jambs. Allow 1 1/4" (32mm) minimum headroom at top for hardware, plus 1/4" to 5/8" (6-16mm) clearance between door and floor. To obtain this, the recommended door height is 1 3/4" (44mm) less than the finished opening height. This provides 5/16" (8mm) adjustment for plumbing to jamb.

Step 2 - Hanger plate is self seating at top of door. With single wheel hangers, mount 1/2" (13mm) from edge of door; mount twin wheel hangers 1 3/4" (44mm) from edge. Place screws at arrows on hanger plate.

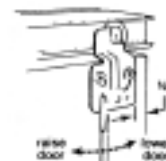

Step 3 - Lift doors on track, installing the inside or rear door first. Angle door approx. 15 degrees to engage wheels in track.

Step 4 - To align the doors back off on hanger screws slightly, insert screwdriver in hanger slot and adjust for height and plumb. Finally, tighten screws.

Step 5 - When using adjustable floor guide (left below), insert nylon piece in metal plate slots corresponding to door size, then locate under doors at center of opening. If using one-piece nylon guide (opt.) for 1 3/8" doors only, position same as for adjustable guide.

